

Wiring diagram for Adaptronic 440 Universal Select ECU 2010-10-22

Note: all connectors viewed from wiring/loom side (not pin side)
To confirm: check wire colours

Note: Injectors can be high or low impedance



CAUTION: DO NOT CONNECT IGNITION OUTPUTS DIRECTLY TO IGNITION COILS
The ECU has no built-in igniter. A separate ignitor or transistor must be used (as shown on this diagram)
Damaging the ECU outputs via misconnection will void warranty

Title		
Size	Number	Revision
A4		
Date:	22-Oct-2010	Sheet of
File:	Z:\Products\Select\440,NA6,NA8\Doco\440NA6NA8.ddb	Wiring Diagram.ddb